Image: Descent to be properties of the properties of

Done!

Assembly instructions


040. Curved flat bench+low sides

Five steps procedure

What do you need?

- 12 BHSS M8X10 screws

- a hex screwdriver/Allen key

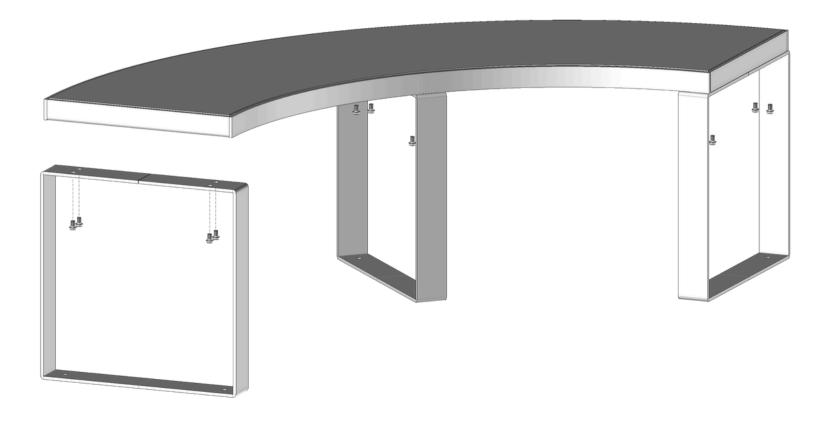

##